



SIwave Material Library

In order to maintain a personal library within SIwave please read the following:


- By default, when SIwave is launched, the « Materials.amat » file stored in the SysLib is loaded as well as every library definition from your personal lib and from the HF/SI tools.

1. You will see the following:

- Loaded material library
“C:/Program Files/...../personalib/perso.amat”
- Loaded material library:
“C:/Program Files/AnsysEM/AnsysEM16.2/Win64/ElectronicsDesktop/syslib/Materials.amat”
- Loaded material library
“C:/Program Files/AnsysEM/AnsysEM16.2/Win64/SIwave/syslib/Materials.amat”

- Now assuming you have created an .amat file you can add it as follows:

1. Open up ENV Variables
2. Add New System or User variable as appropriate based off IT restrictions
 - Variable Name = SIWAVE_MATERIAL_FILE
 - Variable Value = Path to .amat file

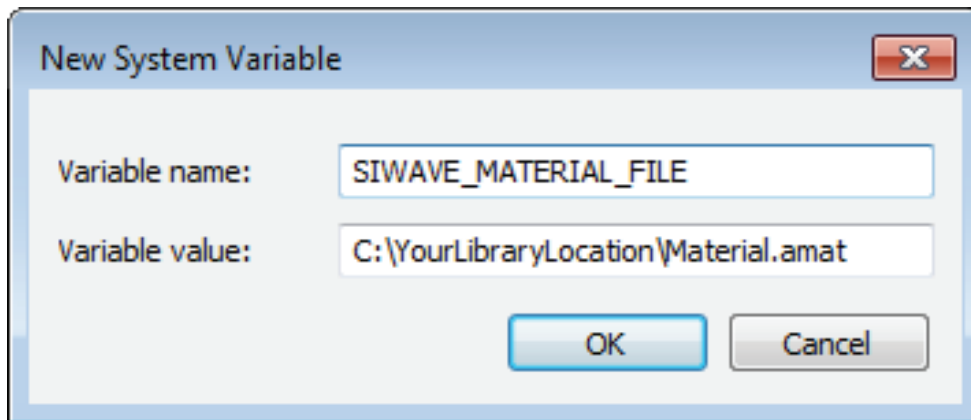

- This should now create upon SIwave start up

1. Loaded material library
 - “Libraries\Link to Artwork\Material.amat”