



Level 3 Industrial Case Study

Porous Scaffolds for Bone Tissue Engineering

Claes Fredriksson and Phillipa Newby

Ansys Materials Education Division

First published: Apr 2017

This version: Aug 2021

Summary

The Synthesizer tool in Granta EduPack, combined with materials information in the Bioengineering database provides new possibilities to explore and select materials for medical implants. In this case study, we investigate hybrid materials for scaffolds in bone tissue engineering. The implants are modeled as bioceramic foams with a range of porosity. The resulting materials can be compared to human tissue and biomaterials in property charts which helps the understanding and design of suitable scaffolds.

Due to the complex biological environment that biomedical materials are subjected to—particularly implanted devices—it is time consuming, costly and difficult to test a large range of potential candidates. This makes accurate data and the synthesizer approach to estimating new or combined material properties very useful.

Table of Contents


1. What is the scope?	3
2. How to tackle the problem.....	4
3. Using Granta EduPack to synthesize hybrids	4
4. Results	5
5. Analysis and reality check.....	6
6. What does Granta EduPack bring to the understanding?	7
References.....	8

1. What is the scope?

Bioengineering is a broad and cross-disciplinary area ranging from biomaterials to tissue engineering. One essential aspect of materials with biological function is, of course, biocompatibility. However, compatibility of physical and mechanical properties can also be important. This is the case for implants that are part of the skeletal system.

In the field of bone tissue engineering, bioactive glass-ceramic scaffolds have generated significant interest, as they can provide a 3D template that promotes new bone formation. Such scaffolds have proven that they can mimic trabecular bone structure as well as exhibit adequate mechanical properties and bioactivity to support the growth of new bone tissue [1].

Biomechanical properties of bone implants are critical to their structural function *in vivo*. They should be approved for use in the human body, naturally, but must also have appropriate porosity to be assimilated by the body. The porosity of the implant material is linked to its average (effective) density in a linear fashion; the more porous, the lower the implant density. It is also linked to other properties, such as strength or stiffness.

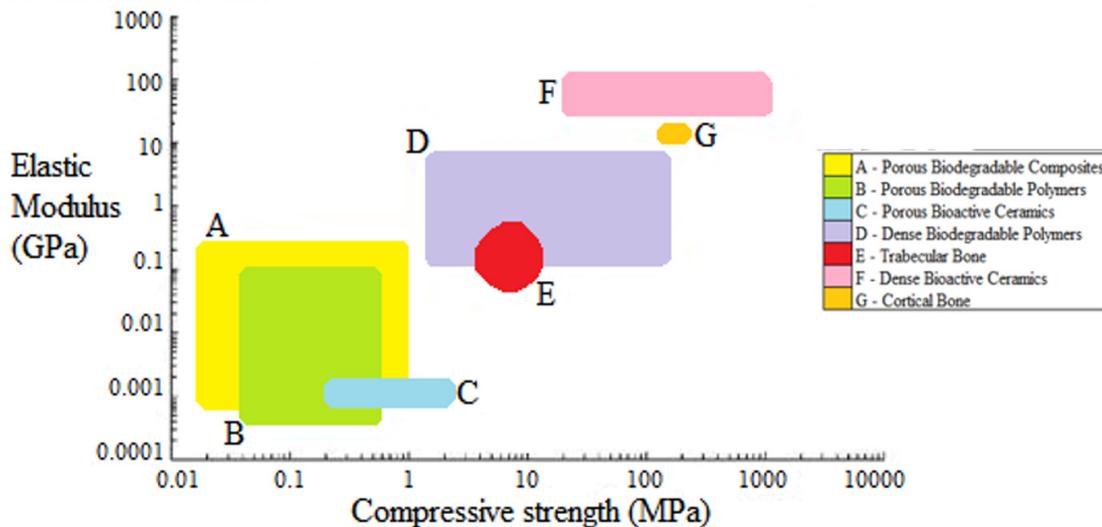

Comparison of mechanical properties for a variety of biomaterials including polymers and bone [2]

Our objective in this case study is to explore the use of the Synthesizer tool in Granta EduPack to investigate the influence of porosity on the biomechanical properties of a hybrid scaffold material (foam). We also want to compare these properties with other relevant biomaterials and biological materials. The starting point will be bone-like materials, such as calcium phosphates and bioglasses, that fulfill typical biomedical constraints. The main mechanical property to consider is the compressive strength.


The man-made scaffolds have a porous structure that mimics the trabecular bone porosity. They have the ability to induce the formation of hydroxyapatite (HA) on their surfaces in physiological conditions that naturally encourages bone attachment and promotes bone regeneration. However, these scaffolds exhibit certain drawbacks in terms of their mechanical performance, as they do not have the required compressive strength for safe handling and for load-bearing applications. Moreover, these materials have not yet been fully tailored to enhance their bone-regeneration capabilities. Nor has the structural integrity of the scaffolds been optimised, including their resistance to crack propagation (work of fracture).

2. How to tackle the problem

Granta EduPack can provide a systematic approach for material selection, *i.e.*, screening and subsequent ranking based on material performance indices. This can easily be applied also to biomedical materials, since this is one of several provided subsets within the Bioengineering Edition. However, in this case study, the objective is different.

We want to compare existing biological and biomedical materials with a range of hybrid materials, with properties estimated by the models of the Synthesizer tool. This tool is available in the Bioengineering Database of Granta EduPack, allowing bench-marking of the simulated hybrids with relevant reference biomaterials, such as PEEK, titanium and HA.


The platform for this comparison is the *Bioengineering Level 3* database of Granta EduPack, containing data records for over 4000 materials. We can quickly limit the number of reference materials by creating a custom subset of biological materials and selected polymer, ceramic and metal biomaterials, indicated right.

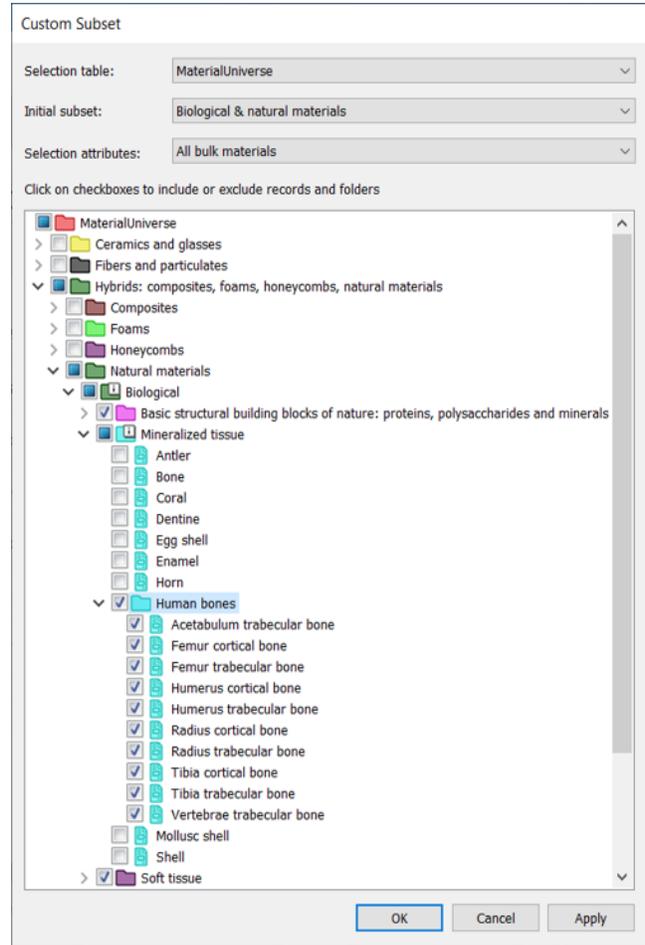

3. Using Granta EduPack to synthesize hybrids

After compiling a suitable subset for comparisons, we can choose a model from within the Synthesizer tool. Porous ceramics can be represented by *open-cell foams*. In this case study, the aim is to explore a real-world research problem of creating a scaffold that mimics the properties of bone.

Foam, open-cell

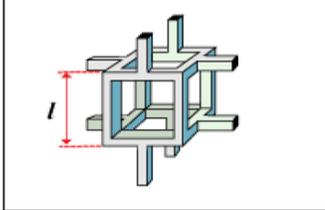


Predicts the performance of open-cell foams, based on relative density

Assumptions:

- Cell size and structure is uniform
- Cell geometry is isotropic
- All cells are interconnected and filled with air

Relative density = (density of cellular structure) / (density of solid from which it is made)

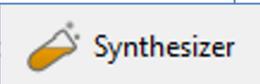

Starting with typical mechanical properties, *Yield strength* and *Young's modulus*, we can create data records from the synthesis of HA foam with a *relative density* ranging from 5 to 50%. The relative density for a foam is defined as the effective density of the cellular hybrid divided by the density of the solid material it is made from. The relative density values in our chart corresponds to a porosity between 50 and 95%.

5. Analysis and reality check


Bone tissue scaffolds is a fast-emerging application area, as the demand for transplantable tissue currently outstrips supply. This is one of the main driving forces behind the development of this type of implant. There is a great deal of research going on to improve the current crop of scaffolds through creating composites or coating scaffolds with biodegradable polymers to strike a balance between the mechanical properties needed to support the bone regrowth and other functional requirements.

Due to the deficiency in compressional strength, there are currently not a vast number of these highly porous scaffolds on the market and the ones that are tend to be used in non-load-bearing situations. One such example is the Novabone Porous-Bone Graft Scaffold produced from Bioglass by Novabone Products LLC. More information about the range of scaffolds on the market can be found in the ASM Medical Materials Database (adjacent) that is accessible via the Bioengineering Edition of GrantaEduPack with the appropriate subscription.

Novabone Porous-Bone Graft Scaffold (K060432)	
▼ General Information	
Medical Industry	Orthopaedic
Medical Device Type	Bone fixation and repair
Device Category	Orthopaedic - Fixation Devices
Device Trade Name and FDA Link	Novabone Porous-Bone Graft Scaffold
Guidance Documents	<ul style="list-style-type: none"> USFDA-CDRH Guidance for Class II Special Controls for Resorbable Calcium Salt Bone Void Filler Device [View Note]
▶ Typical Duration of Implantation	
▶ US FDA Classification	
▼ US FDA Summary Information	
FDA Documentation Type Indicator	Summary only (m)
Accessed from FDA (Date)	Monday, May 21, 2007
FDA Decision Date	Tuesday, April 04, 2006
Device Description	
<p>Novabone Porous is an osteoconductive bioactive device. It is a one-component, resorbable bone void filler composed of a synthetic calcium phospho-silicate (Bioglass) particulate, fused into a bulk porous form having a multidirectional interconnected porosity. On implantation, Novabone Porous undergoes a time-dependent surface modification, resulting in the formation of a calcium phosphate layer on the device surfaces. The device acts as a scaffold, with new bone infiltrating the porous structure. Novabone Porous is progressively resorbed and replaced by new bone tissue during the healing process.</p>	
Applicant Name	
<p>Novabone Products, LLC David M Gaisser 13709 Progress Blvd., #33 Alachua, FL 32815</p>	
510(k) Number or PMA Number	K060432
▶ US FDA Recall Information	
▼ Additional Information (Manufacturer Specific)	
<ul style="list-style-type: none"> Materials used in this device <ul style="list-style-type: none"> Biocative Glass [View Note] 	
▼ Device Producer(s)	
<ul style="list-style-type: none"> Producers <ul style="list-style-type: none"> Novabone Products LLC 	

We have shown that the Synthesizer tool allows the comparison of simulated materials with data from the database. You can, however, also add other external porous materials data from research straight into the chart. In the bar-chart below, we have added a number of examples from referenced sources (see Table). These are added using the *Add Record* feature available in the Tools menu (or by right-clicking directly in the chart). These additional reference materials are shown as dark blue bars in the resulting chart.


Table of additional reference material from research papers

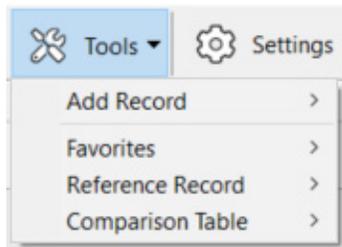

Up to 10 additional records can be added into your project via the Tools menu, and saved with your chart in a Project file

Material name	Porosity range (%)	Compressional Strength range (MPa)	References
Bioceramic 13-93	50 - 60	10 - 47	[3, 4]
Alumina Ceramic	63 - 82	2.6 - 37	[5]
Titanium Foam	17 - 81	150 - 240	[6-8]
TCP/HA	31 - 80	2 - 36	[9-11]
Bioglass/HA	84 - 91	0.87 - 2.78	[12]
Silica coated with Gelatin	65 - 90	0.24 - 8	[13]
Hydroxyapatite with Alginate	88 - 90	6.3 - 83	[14]
Bioglass coated with Chitosan	75 - 80	1.2 - 15	[15]
Calcium Phosphate coated with PLA	70 - 75	28 - 99	[16]
Beta-TCP coated with Gelatin	77 - 86	0.11 - 0.78	[17]

The materials found in research papers span a range of mechanical properties, as can be seen below. Notably, titanium foams show that there are cellular materials that combine compressive strength, comparable with cortical bone, with a high degree of porosity. Whereas bulk titanium alloys may be too stiff and hard for mechanical compatibility, the foams offer possibilities to moderate these properties while providing channels for body fluids and integration. The issue of biodegradability, however, remains a problem.

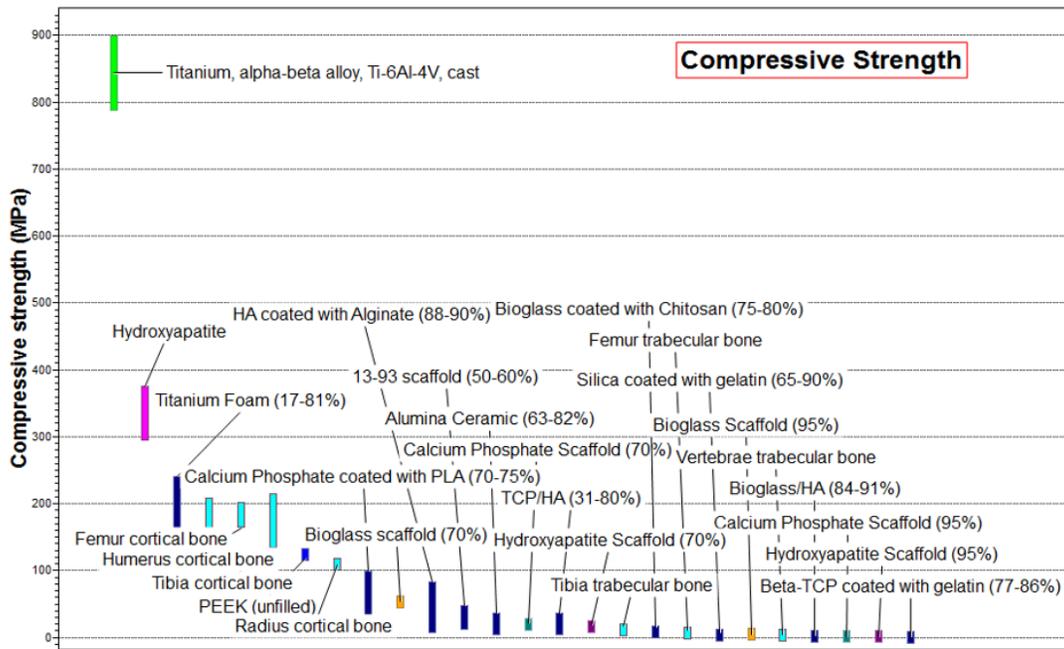

A final bar-chart showing the critical property for bone tissue implants with added research data [3-17]

6. What does Granta EduPack bring to the understanding?

Granta EduPack produces highly visual results which, combined with the expertise of an educator, can help to teach bioengineering in an engaging and interactive way. It aids exploration and promotes good materials decisions in many relevant areas.

In this case study, Granta EduPack suggest the following conclusions:

- The Bioengineering database has a large number of relevant specialized materials and data organized into useful subsets, as demonstrated for biomedical materials.
- The Synthesizer tool can be used to model mechanical properties of highly porous materials so they can be matched with, for example, trabecular bone.
- Bulk materials used currently in bone tissue engineering, such as Hydroxyapatite, calcium phosphate and Bioglass ceramics can be used as reference materials. These can easily be compared with simulated porous materials and can be utilized as benchmark for improvements.
- When comparing the highly porous materials with the bone it is trying to mimic, the mechanical properties do not yet compare to those of cortical bone. With the addition of coatings or a change in composition, the mechanical properties of the scaffolds could match those of bone, as demonstrated by titanium foam.

The Bioengineering database of the MaterialUniverse provides generic material property data, enabling main material properties to be compared to estimates generated in the Synthesizer tool. The next step may be to use a specialized database, such as the ASM Biomedical Materials Database, available via Granta EduPack for those who have a subscription with ASM. These give more detailed information about specific scaffolds and bulk materials which can be explored as a more advanced extension to this case study.

References

1. **Q Z Chen, I D Thompson and A R Boccaccini.** 45S5 Bioglass -derived glass-ceramic scaffolds for bone tissue engineering. *Biomaterials*. 2006, 27, pp. 2414-2425.
2. **D W Sommerfeldt and C T Rubin.** "Biology of bone and how it orchestrates the form and function of the skeleton". *Eur Spine J (2001) 10: S86–S95*. 2001, Vol. 10, suppl 2, pp. S86-S95.
3. **X Liu, M N Rahaman, Q Fu and A P Tomsia.** Porous and strong bioactive glass (13-93) scaffolds prepared by unidirectional freezing of camphene-based suspensions. *Acta Biomaterialia*. 2012, Vol. 8, 1, pp. 415-423.
4. **X Liu, M N Rahaman and Q Fu.** Oriented bioactive glass (13-93) scaffold with controllable pore size by unidirectional freezing of camphene-based suspensions: Microstructure and mechanical response. *Acta Biomaterialia*. 2011, Vol. 7, pp. 406-416.
5. **D Y Li and M S Li.** Preparation of porous alumina ceramic with ultra-high porosity and long straight pores by freeze casting. *Journal of Porous Materials*. 2012, Vol. 19, 3, pp. 345-349.
6. **K Kato, S Ochiai, A Yamamoto, Y Daigo, K Honma, S Matano and K Omari.** Novel multi layer Ti foam with cortical bone strength and cytocompatibility. *Acta Biomaterialia*. 2013, Vol. 9, 3, pp. 5802-5809.
7. **R Singh, P D Lee, J R Jones, G Podogasundarampaillai, T Post, T C Lindley and R J Dashwood.** Hierarchically structured titanium foams for tissue scaffold application. *Acta Biomaterialia*. 2010, Vol. 6, 12, pp. 4596-4604.
8. **J H Lee, H E Kim and Y H Koh.** Highly porous titanium (Ti) scaffolds with bioactive microporous hydroxyapatite/TiO₂ hybrid coating layer. *Materials Letters*. 2009, Vol. 63, 23, pp. 1995-1998.
9. **S Deville.** Freeze-casting of porous biomaterials: Structure, properties and opportunities. *Materials*. 2010, Vol. 3, 3, pp. 1913-1927.
10. **A Macchetta, I G Turner and C R Bowen.** Fabrication of HA/TCP scaffolds with a graded and porous structure using a camphene based freeze-casting method. *Acta Biomaterialia*. 2009, Vol. 5, 4, pp. 1319-1327.
11. **M Genet, M Houmard, E Saiz and A P Tomsia.** A two-scale Weibull approach to the failure of porous ceramic structure made by robocasting: Possibilities and limits. *Journal of European Ceramic Society*. 2013, Vol. 33, 4, pp. 679-688.
12. **H Ghomi, M H Faith and H Edris.** Effect of the composition of hydroxyapatite/bioactive glass nanocomposite foams on their bioactivity and mechanical properties. *Materials Research Bulletin*. 2012, Vol. 47, 11, pp. 3523-3532.
13. **O Mahony, O Tsigkou, C Ionescu, C Minelli, L Ling, R Hanly, M E Smith, M M Stevens and J R Jones.** Silca-gelatin hybrids with tailorable degradation and mechanical properties for tissue regeneration. *Advanced Functional Materials*. 2010, Vol. 20, 22, pp. 3835-3845.
14. **G Turco, E Marsich, F Bellomo, S Semerano, I Donati, F Brun, M Grandolfo, A Accardo and S Paoletti.** Alginate/Hydroxyapatite biocomposite for bone ingrowth: A trabecular structure with high and isotropic connectivity. *Biomacromoles*. 2009, Vol. 10, 6, pp. 1575-1583.
15. **L Liverani, J A Roether, P Noeaid, M Trombetta, D W Shubert and A R Boccaccini.** Simple fabrication technique for multilayered stratified composite scaffolds suitable for interface tissue engineering. *Materials Science and Engineering A*. 2012, Vol. 557, pp. 54-58.
16. **T Seria, J A Planell and M Navarro.** High resolution PLA-based composite scaffolds via 3-D printing technology. *Acta Biomaterialia*. 2013, Vol. 9, 3, pp. 5521-5530.
17. **S M Kim, S A Yi, S H Choi, K M Kim and Y K Lee.** Gelatin-layered and multi-sized porous beta-tricalcium phosphate for tissue engineering scaffold. *Nanoscale research letters*. 2012, Vol. 7, 78, pp. 1-5.

© 2021 ANSYS, Inc. All rights reserved.

Use and Reproduction

The content used in this resource may only be used or reproduced for teaching purposes; and any commercial use is strictly prohibited.

Document Information

This case study is part of a set of teaching resources to help introduce students to materials, processes and rational selections.

Ansys Education Resources

To access more undergraduate education resources, including lecture presentations with notes, exercises with worked solutions, microprojects, real life examples and more, visit www.ansys.com/education-resources.

ANSYS, Inc.
Southeppointe
2600 Ansys Drive
Canonsburg, PA 15317
U.S.A.
724.746.3304
ansysinfo@ansys.com

If you've ever seen a rocket launch, flown on an airplane, driven a car, used a computer, touched a mobile device, crossed a bridge or put on wearable technology, chances are you've used a product where Ansys software played a critical role in its creation. Ansys is the global leader in engineering simulation. We help the world's most innovative companies deliver radically better products to their customers. By offering the best and broadest portfolio of engineering simulation software, we help them solve the most complex design challenges and engineer products limited only by imagination.

visit www.ansys.com for more information

Any and all ANSYS, Inc. brand, product, service and feature names, logos and slogans are registered trademarks or trademarks of ANSYS, Inc. or its subsidiaries in the United States or other countries. All other brand, product, service and feature names or trademarks are the property of their respective owners.

© 2021 ANSYS, Inc. All Rights Reserved.