



## **Ansys + Meltio**

“This is the first and big step in learning to predict thermo-mechanical behavior in additive manufacturing of parts by means of simulation.”

— **Alejandro Lázaro Martínez**  
Process and Material Manager / Meltio

## / Improving Printability of Large Directed Energy Deposition Components with Simulation

Meltio and Ansys evaluated the accuracy of Ansys additive manufacturing simulation. Using the additive manufacturing directed energy deposition (AM-DED) module in Ansys Additive Suite, the printability of a nickel-based turbine blade component was investigated and the results were compared with a physical part.

### / Challenges

Directed energy deposition (DED), an additive manufacturing (AM) technology, is known for its varied usages that enable manufacturing and the repair of metal components using powder or wire material. While other technologies such as powder bed fusion limit the size of the printing components to the machine build envelopes, AM-DED (wire arc and laser-based wire) processes offer larger build envelopes, high deposition rates, greater cost benefits, and increased manufacturing freedom due to the multiple deposition axes. AM-DED is used today across multiple industries, including mass manufacturing, maintenance, and industrial applications. But despite these advantages, distortions and residual stresses can potentially be observed in printed components. Especially when manufacturing large metal components that can take days or weeks to complete, it is essential to control the process and avoid manufacturing defects.

Meltio's technology, Wire Laser Metal Deposition, is a DED process that functions by precisely stacking weld beads on top of one another, in wire form, when introduced into the laser generated melt pool.

It comes packaged in a compact deposition head, a host of multiple lasers, and is capable of processing single and dual wire within the same build.

### / Technology Used

- Ansys Additive Suite
- Ansys Mechanical
- Ansys Discovery

### / Engineering Solutions

In the AM-DED module within Ansys Additive Suite, a custom system is available to simulate thermomechanical behavior during the DED process. A turbine blade component (geometry size) was selected because it showed manufacturing complexity and the potential for high deformations, if no cooling pauses were added to the process. An easy-to-use wizard was used to set up the analysis, discretize the geometry, and select part and baseplate materials. In the workflow, the thermal history can be calculated based on process parameters (i.e., material deposition rate, preheat temperatures, dwell times, etc.) and results are subsequently transferred to calculate deformation and stresses in a structural analysis (Figure 2).

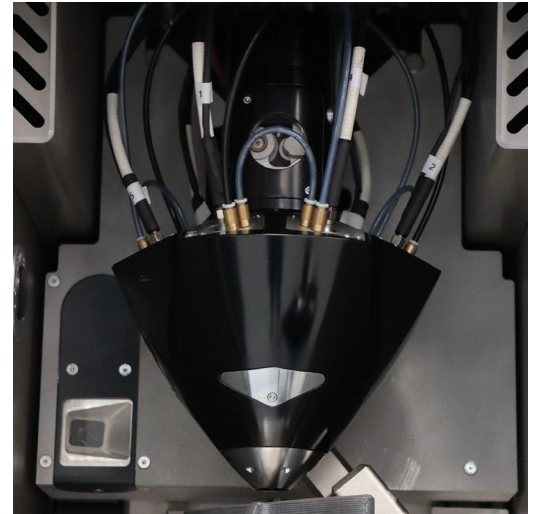


Figure 1. Meltio Technology - Printhead inside of Meltio M450.

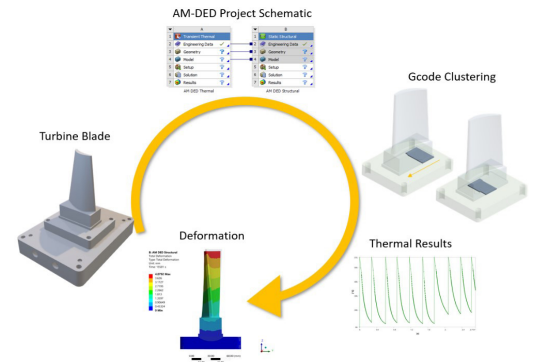


Figure 2. Description of the additive workflow.

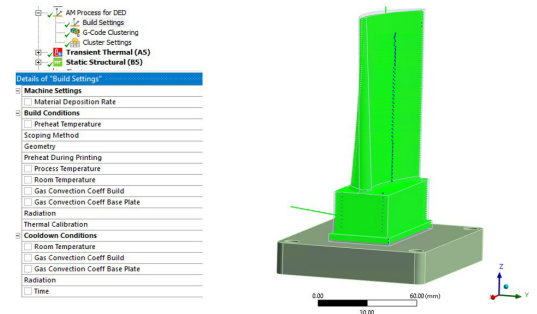


Figure 3. G-code weld path displayed on the turbine blade and process parameters used in Ansys 2023 R2.

Since the order of activation during the printing process influences the thermal history of the component, Meltio provided a G-code file containing the commands used in the 3D printing process. After reading the G-code file, the AM-DED module interpreted the tool path, read the cluster settings, and assigned a cluster activation order that was used in the simulation. To speed up the simulation, a cluster volume that defines the region of activation was defined.

AM-DED printing simulations can help predict warp and defects, and they can also aid in understanding the influence of process parameters. Thermal measurements and process monitoring (i.e., cooling and printing times) in combination with simulation tools not only helped calibrate the analysis, but also gave insight into understanding the impact of process parameters. For this collaboration, the part was printed first, then real-time measurements were used to calibrate thermal coefficients. The printing and cool-down time of the component was on the order of 4h 53min, with a total of 114 layers and wire length used of 183 m.

## Benefits

The temperature results were used to evaluate overheating regions and make correlations with thermal sensors. During the manufacturing of the blade, overheating was observed towards the tip of the geometry. This thermal effect is expected and could be improved by allowing longer wait times between layers, enabling different cooling systems, or using different process parameters in the upper layers (Figure 4). Overheating is also not desirable as it can cause nonhomogeneous microstructures, porosity, and other defects.

Once the transient thermal analysis was completed, the thermal history results were automatically transferred to a structural analysis. In AM-DED, the high-temperature gradients of AM processes can cause high deformations and residual stresses. Fractures are generally observed if large amounts of overheating are generated during the process, especially close to the anchor bolts. The simulation results can be used to understand and avoid those defects.

Like other AM technologies, DED is also affected by warping effects. As overheating regions accumulate in the upper layers, deformation is also expected in the same locations. In order to test the simulation, a sample blade was purposely printed with an accelerated process that overheated the structure, resulting in a deformation in the tip that reached a maximum value of 4.0 mm compared to the target geometry. If compared with the component height (value in mm), the value could be considered insignificant; however, for the given application, it will require a redesign and or a new print of the component. Meltio was also able to provide a scan of the real printed part, and the results were compared. As can be seen in Figure 5, the measurements indicate a deformation of the order of 4 mm, as predicted in the simulation.

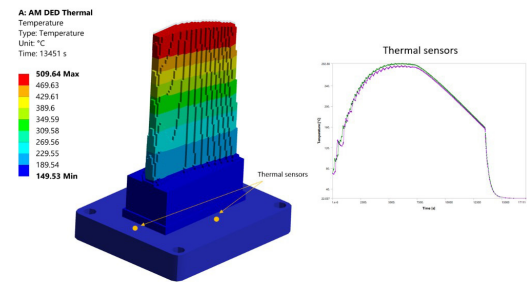


Figure 4. Overheating in the upper layers and thermal sensors captured with the simulation.

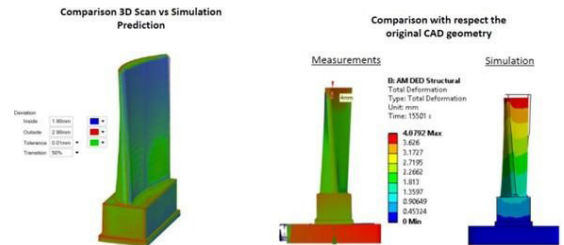


Figure 5. (a) Comparison between the 3D scan versus the simulation prediction; (b) comparison between the measurements, simulation results, and nominal geometry.



Figure 6. Comparison between turbine blade printed on the base and after removing and machining.



Figure 7. Turbine blade printed (DED) removed from the base.

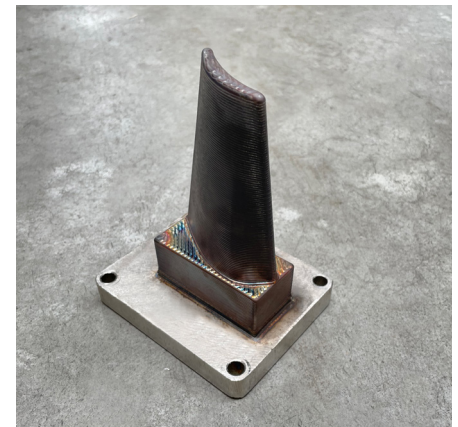


Figure 8. Turbine blade printed (DED) on the base.

## / Company Description

Meltio, founded in 2019 and based in Linares, Spain, develops and fabricates high-quality disruptive products aimed at high-profile industrial end customers and R&D organizations such as universities and research-oriented companies. Meltio's current portfolio of metal solutions includes the Meltio M450 metal 3D printer; the Meltio Engine CNC Integration, which turns virtually any CNC machine into a powerful hybrid manufacturing center; and the Meltio Engine Robot Integration, which is the perfect platform for large and complex 3D printing, repair, cladding, and feature addition. The company's latest product launch, Meltio Robot Cell, is an affordable turnkey solution for the Meltio Engine Robot Integration. All the systems share the same patented process based on laser metal deposition, a type of DED technology, capable of manufacturing parts using commodity welding wire.

*The team for this project includes Alejandro Lázaro, Process and Material Manager at Meltio, Fran Carretero, Process and Material Engineer at Meltio, Abel Ramos, Lead Application Engineer at Ansys and Enrique Escobar, Lead Application Engineer at Ansys.*

**ANSYS, Inc.**  
Southpointe  
2600 Ansys Drive  
Canonsburg, PA 15317  
U.S.A.  
724-746-3304  
[ansysinfo@ansys.com](mailto:ansysinfo@ansys.com)

When visionary companies need to know how their world-changing ideas will perform, they close the gap between design and reality with Ansys simulation. For more than 50 years, Ansys software has enabled innovators across industries to push boundaries by using the predictive power of simulation. From sustainable transportation to advanced semiconductors, from satellite systems to life-saving medical devices, the next great leaps in human advancement will be powered by Ansys.

*Ansys and any and all ANSYS, Inc. brand, product, service and feature names, logos and slogans are registered trademarks or trademarks of ANSYS, Inc. or its subsidiaries in the United States or other countries. All other brand, product, service and feature names or trademarks are the property of their respective owners.*

Visit [www.ansys.com](http://www.ansys.com) for more information.

©2024 ANSYS, Inc. All rights reserved.